



MobiScribe 電子筆記本閱讀器

教育訓練

- Introduction -

Daniel CHIANG
daniel.chiang@netronixinc.com

課程大綱

- 一、硬體規格與基本操作
- 二、首頁及狀態列
- 三、筆記應用程式
- 四、系統設定
- 五、補充說明


硬體規格與基本操作

規格

Feature	Description
螢幕尺寸	7.8in
處理器	Quad-core ARM Cortex-A53 1.5GHz
記憶體RAM	4GB
儲存空間	64GB
尺寸	195.51 x 148.42 x 8.19 mm
介面	USB-C
作業系統	Android 12
解析度	1404(H) x 1872(V) pixels, 300 ppi
手寫觸控	WACOM 4096 階感壓觸控筆
電池	2500mAH
無線網路	802.11 a/b/g/n/ac, 2.4GHz/5GHz (1T1R)
藍芽版本	BT 5.2


1.3.1 Top View

上方視角

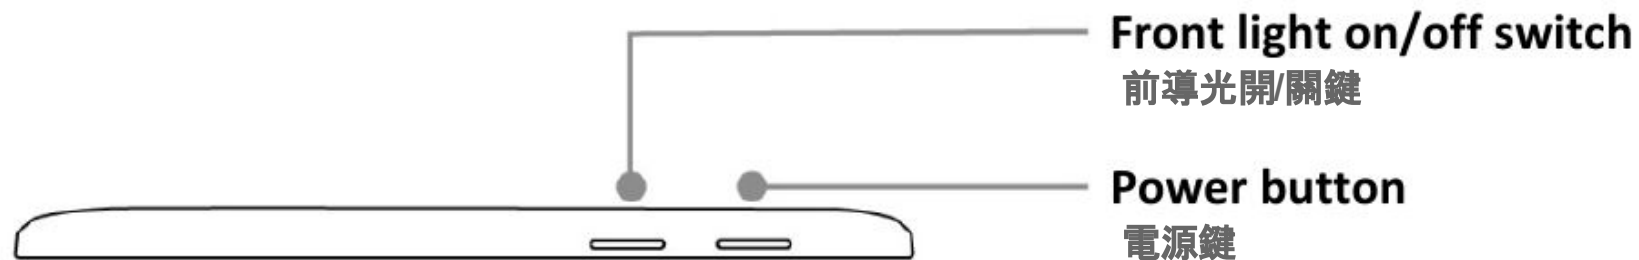

1.3.2 Front View

正面視角

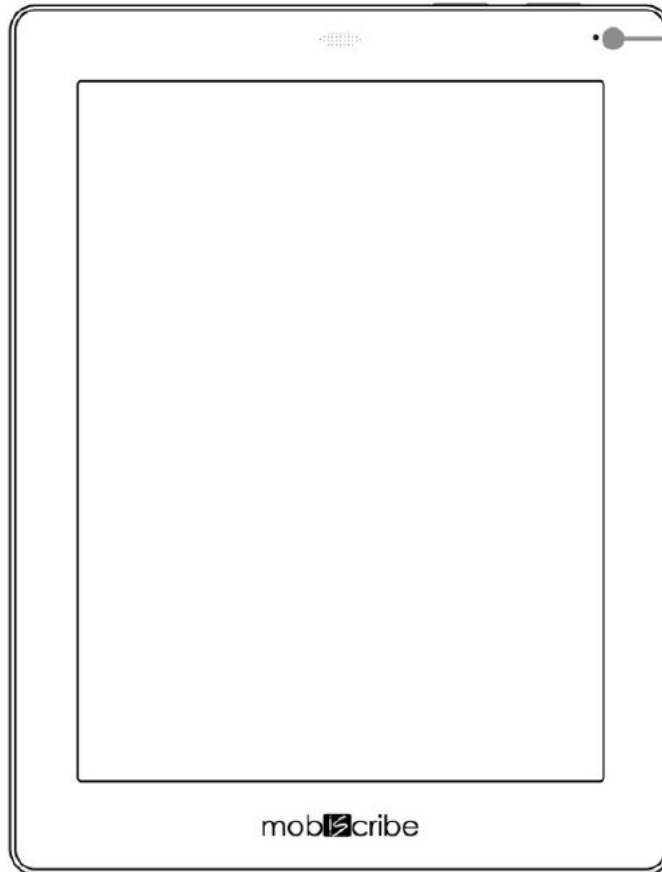

Status light 狀態燈


- Flashes **green** when system is loading. Turns off when system is running.
- Solid **red** when charging. Turns off when charging is complete.

綠燈：開機/系統運作中

紅燈：充電

1.3.3 Bottom View

下方視角

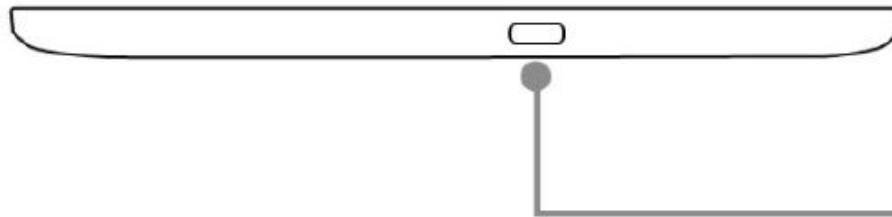


Type-C USB port

- For charging the battery.

Type-C USB 接口：充電/資料傳輸

1.5 Powering On 系統開機

To power on the Electronic Notebook, press the **Power**  button. The status light starts flashing **green**. When loading the system is complete, the status light turns off and you will see the Home screen.

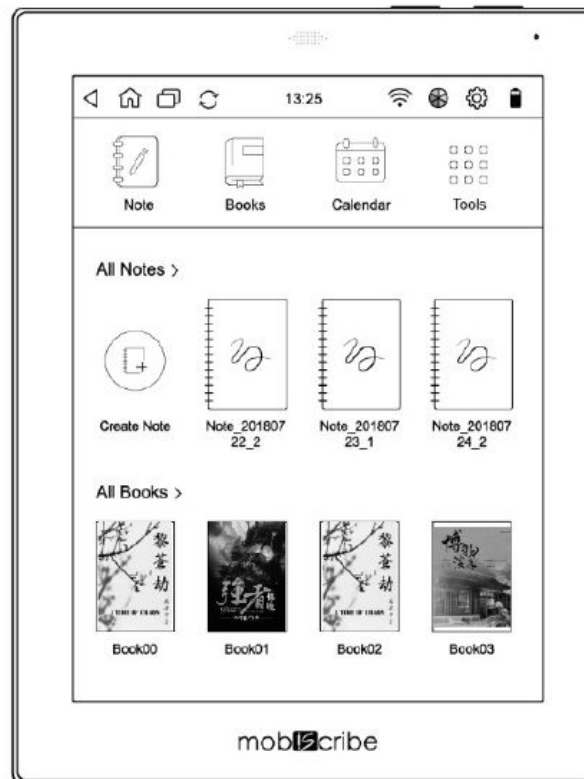

■ 開機：長按電源鍵，指示燈閃爍綠燈即表示系統正在開機中。

1.5.1 Sleep Mode 系統休眠

By default, the Electronic Notebook enters the sleep mode automatically after 5 minutes of inactivity.

To enter the sleep mode manually, short press the **Power**  button. While in the sleep mode, press the **Power**  button again to resume.


Note: The automatic screen timeout time can be adjusted in the  > **Display** > **Screen timeout** menu.

■ 手動休眠：短按電源鍵系統將進入休眠，再短按電源鍵即可重新喚醒

■ 自動休眠：預設為 5 分鐘

可以至以下設置：


設定 > 螢幕 > 螢幕自動關閉

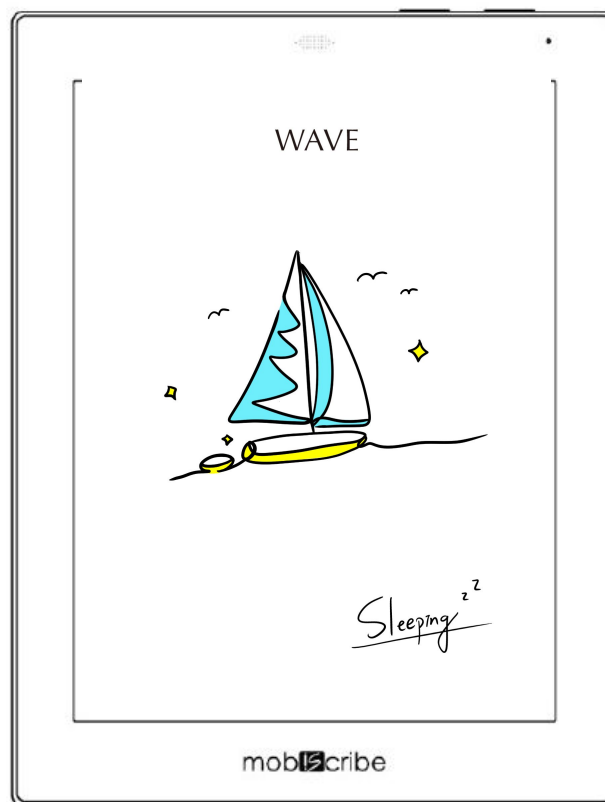


1.5.2 Powering Off 系統關機

To power off the Electronic Notebook, do any of the following:

- Long press the **Power**  button until the Power menu is displayed. Then tap **Power off**.

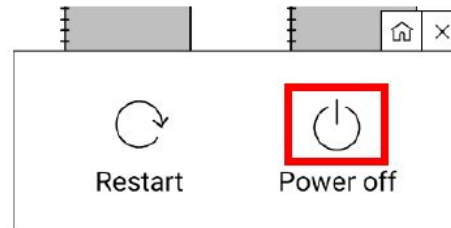

- Tap Quick menu  on the Home screen and next tap .

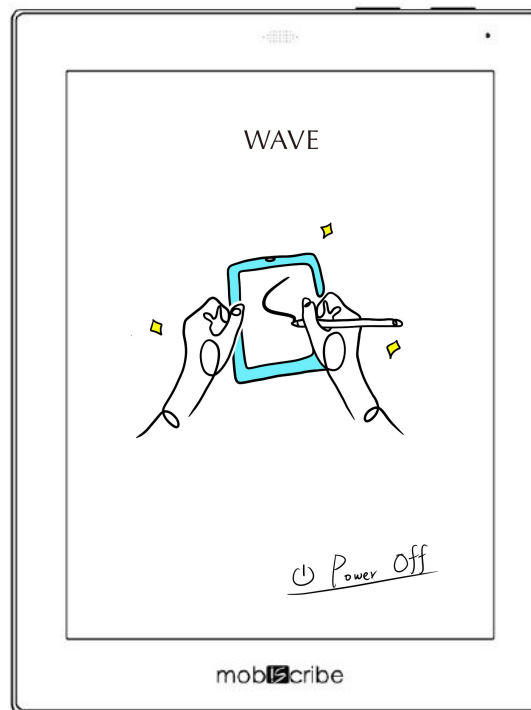

■ 長按電源鍵，系統將顯示關機選單


■ 狀態列 > 系統快速設定 > 關機選項

■ **強制關機**：長按電源鍵10秒後 系統將
強制關機 (系統當機處理方式)

1.6 Stylus 手寫筆


Your Electronic Notebook is shipped with a stylus pen, three refill nibs, and extractor tweezers. Use the stylus to write notes or select items on the touch screen.

Note: You can also select items on the screen with your fingertip.

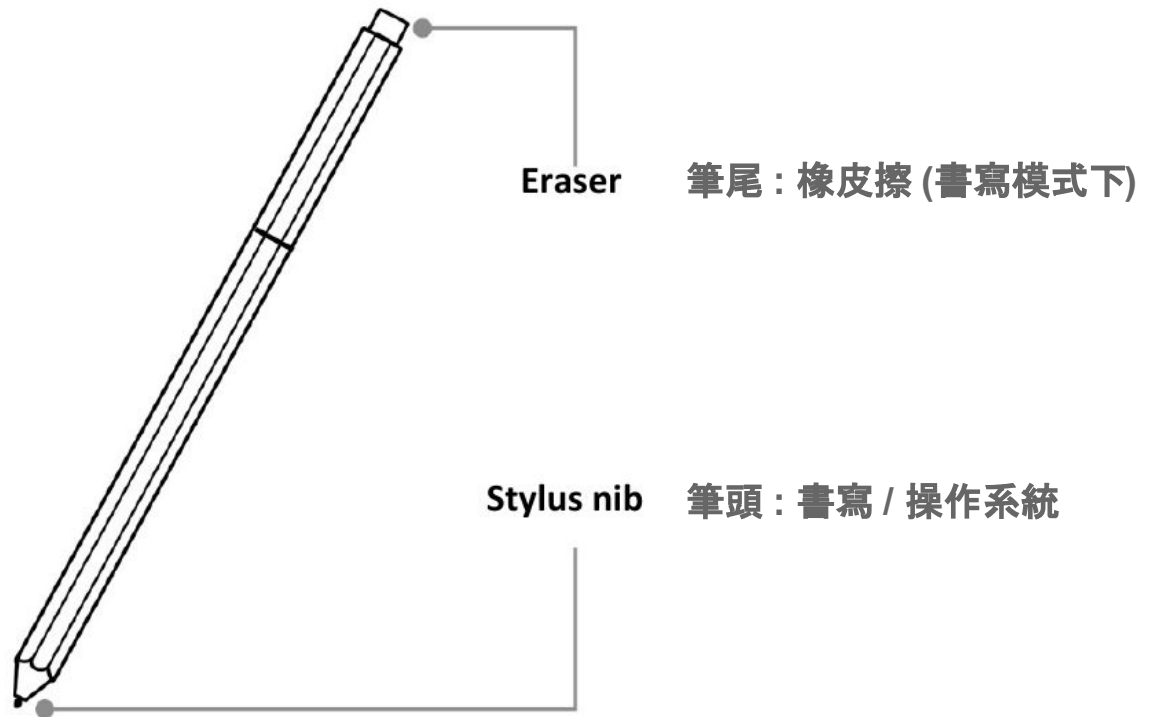


To replace the nib, do the following: 更換手寫筆筆頭

1. Use the supplied extractor tweezers to remove the nib from the stylus.

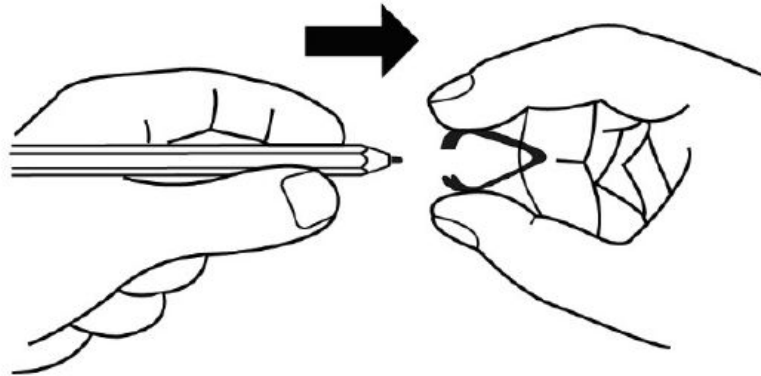

2. Insert the new refill nib into the stylus.

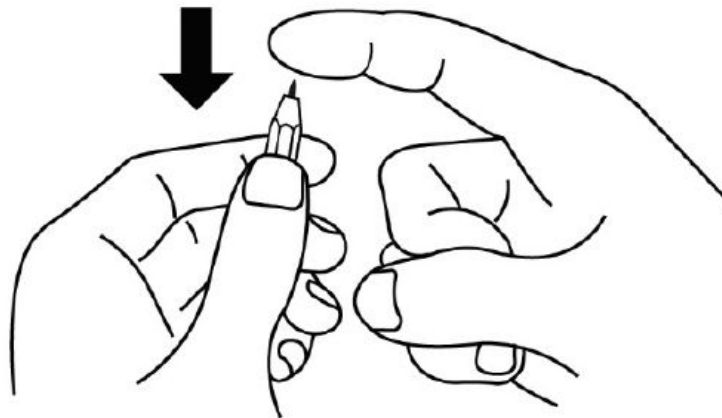



首頁及狀態列

2.1 Home Screen Overview 首頁介紹

Home screen is the first screen that you will see after powering on the Electronic Notebook.


On the Home screen, you can access and view the following items:

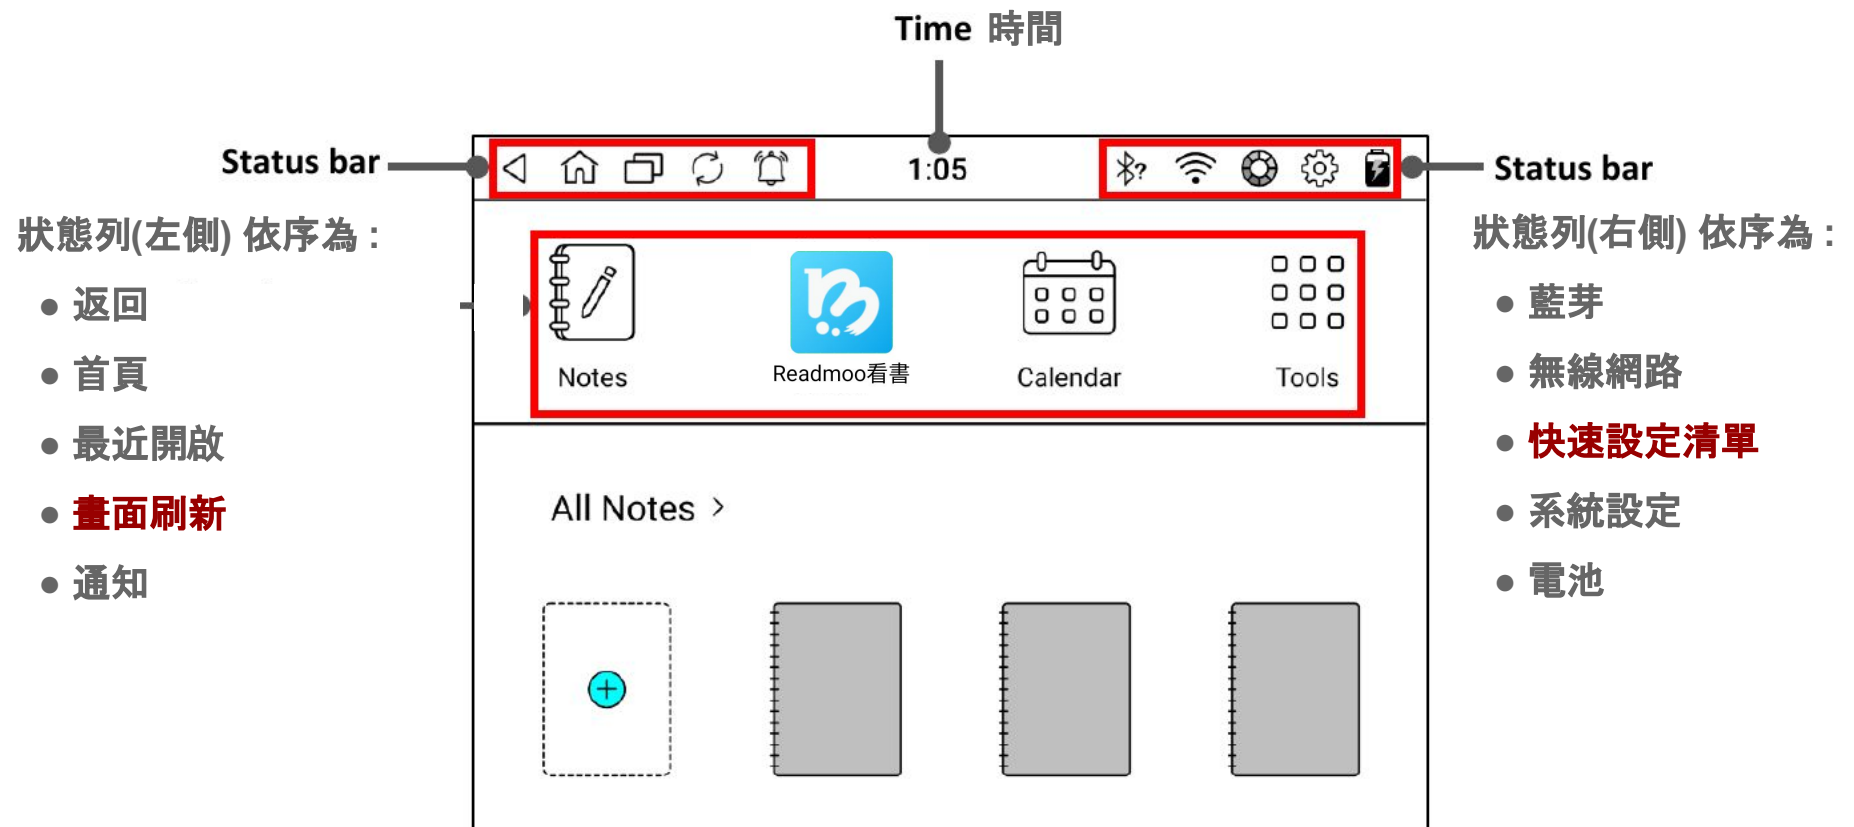

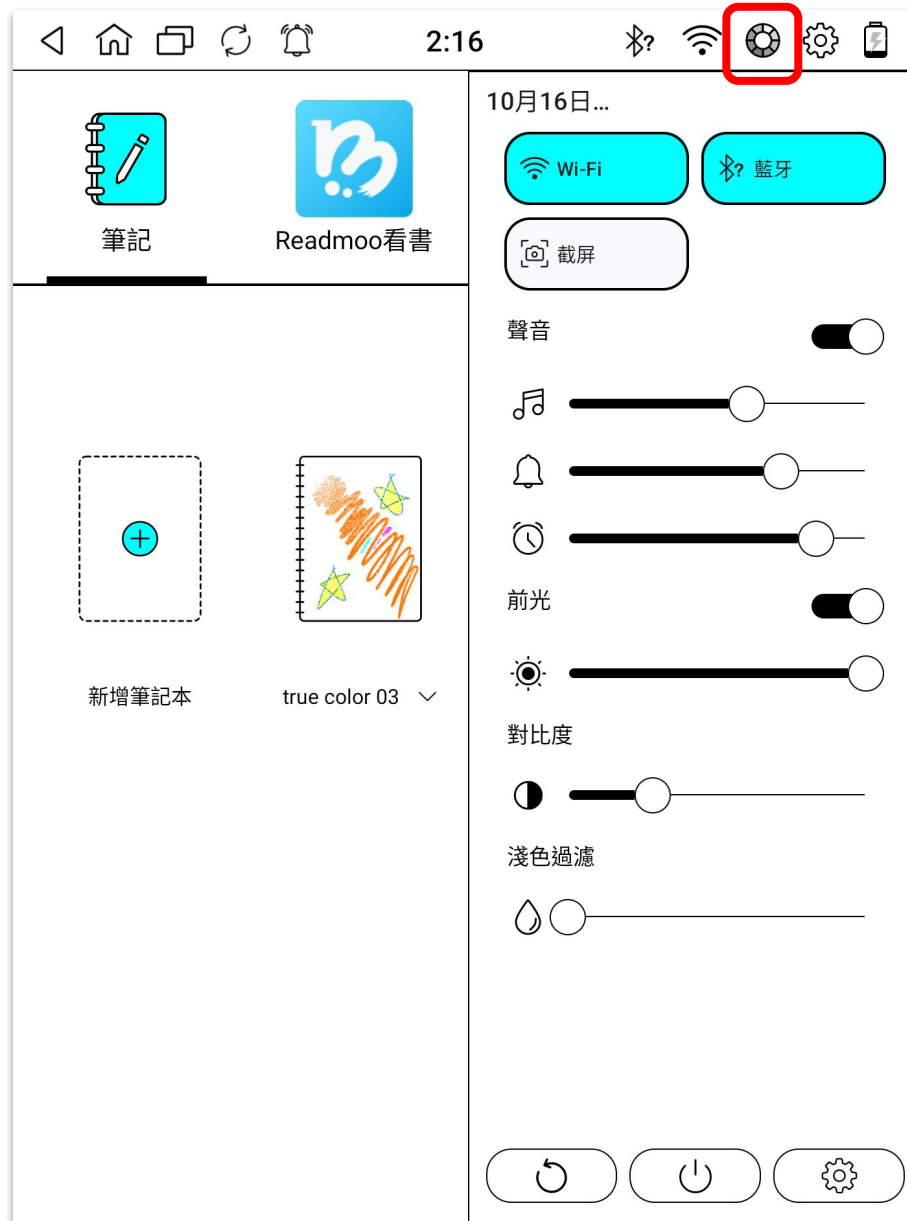


系統快速設定選單


筆記應用程式

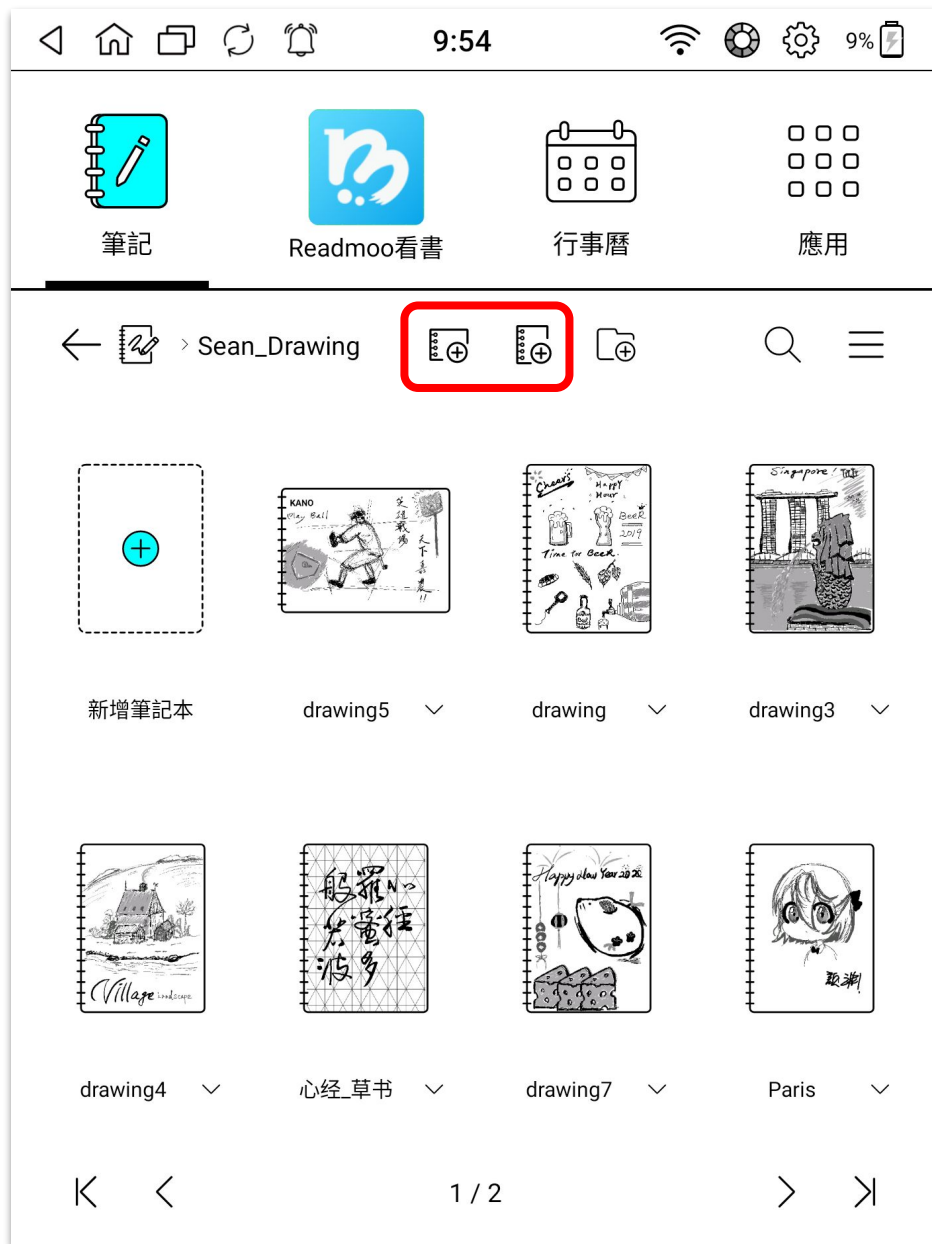

快速新增直式/橫式空白筆記

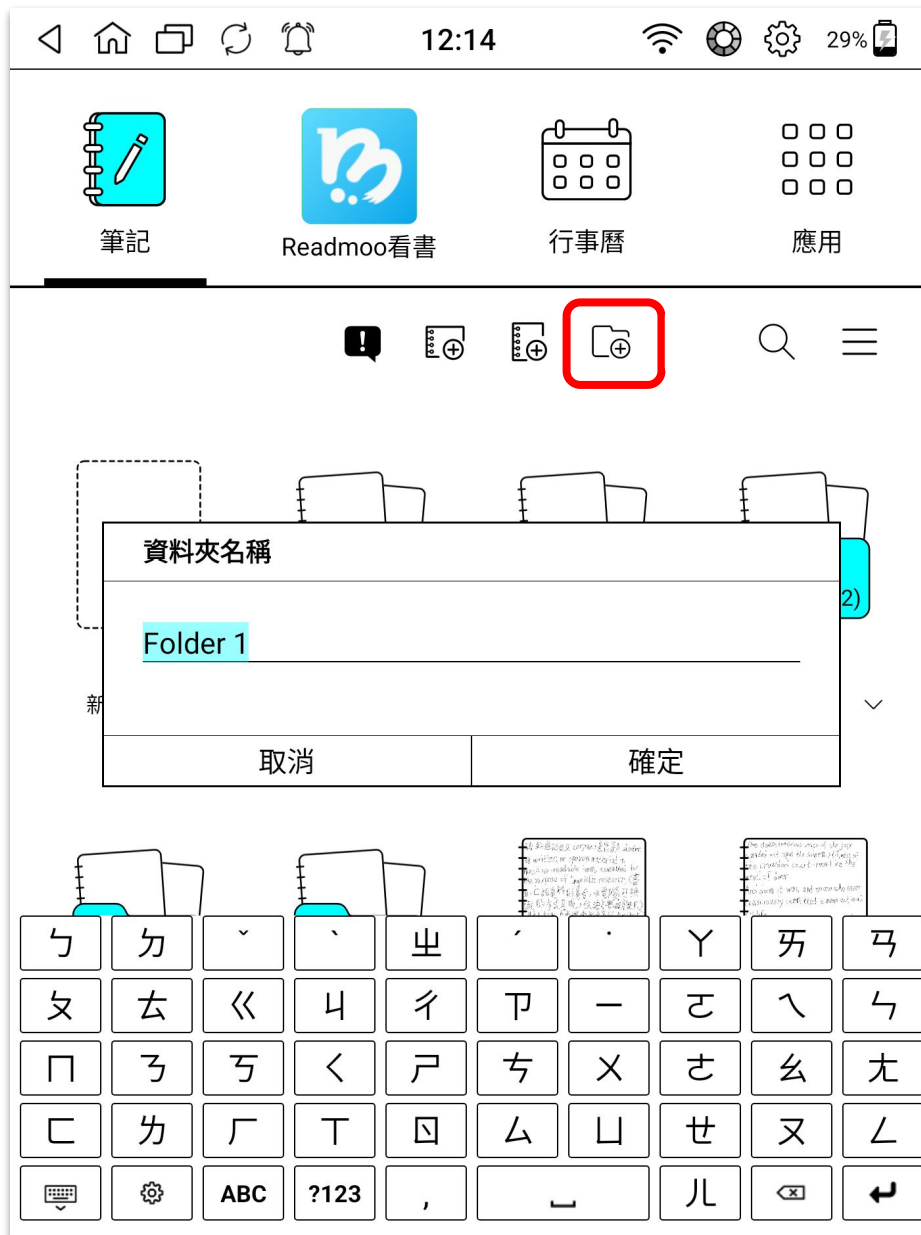 

建立資料夾，用以管理分類筆記

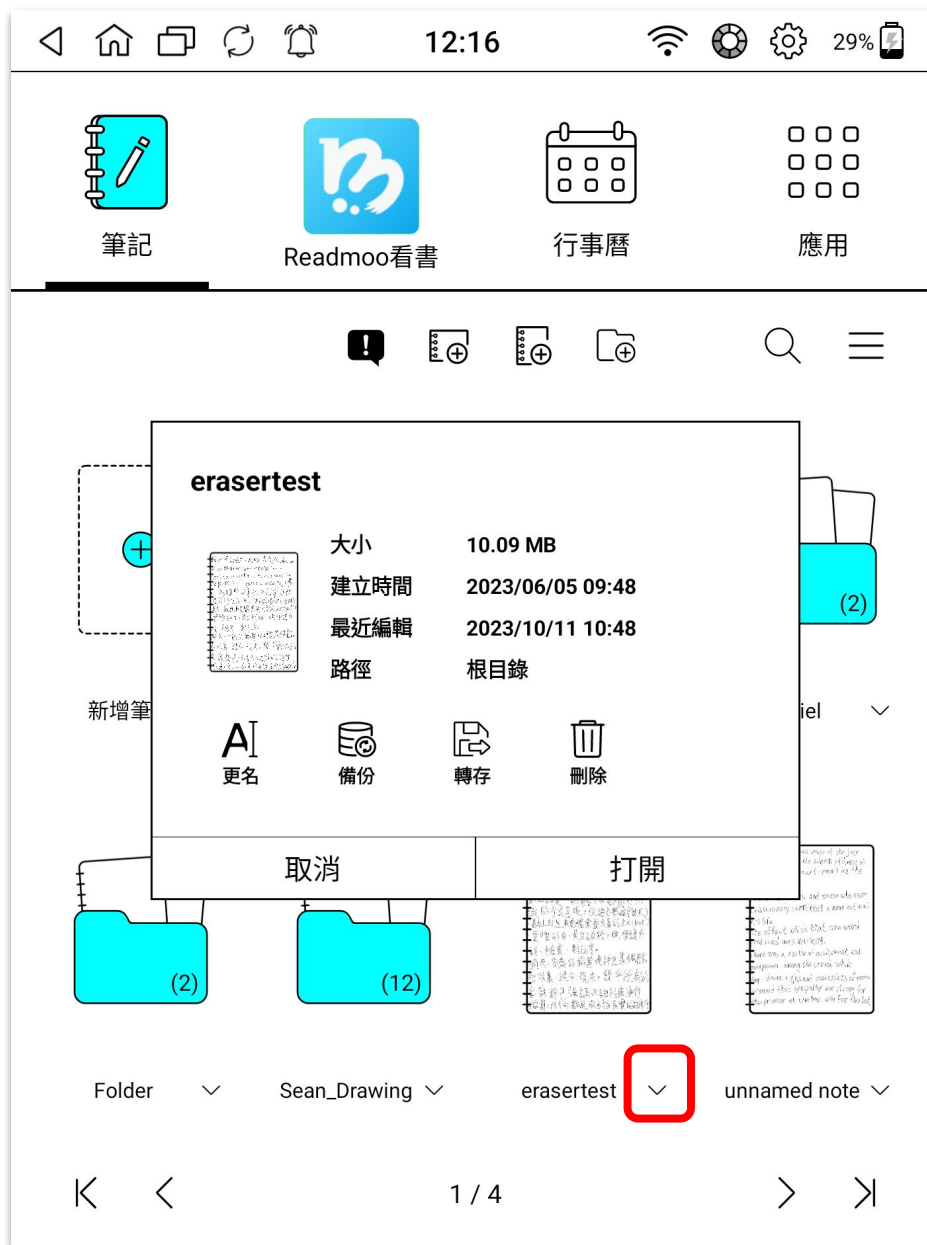 

資料夾/筆記 詳細資訊



筆記



Readmoo看書



行事曆



應用

4

選取



選取全部



剪下



複製



轉存



備份



 
刪除




取消




新增筆記本

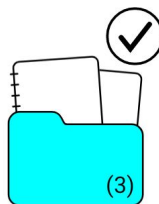


上課

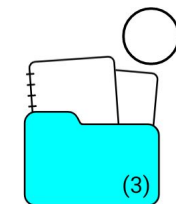 


note手寫文字

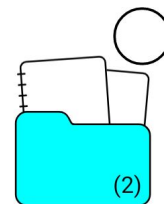 

Daniel

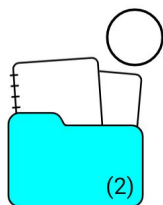 

Folder

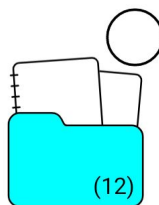 

Sean_Drawing



erasertest



unnamed note

 


1 / 4




長按多選及其選項


- i. Long tap on the notebook icon to select it and/or select more notebooks.
- ii. Tap **Cut**.

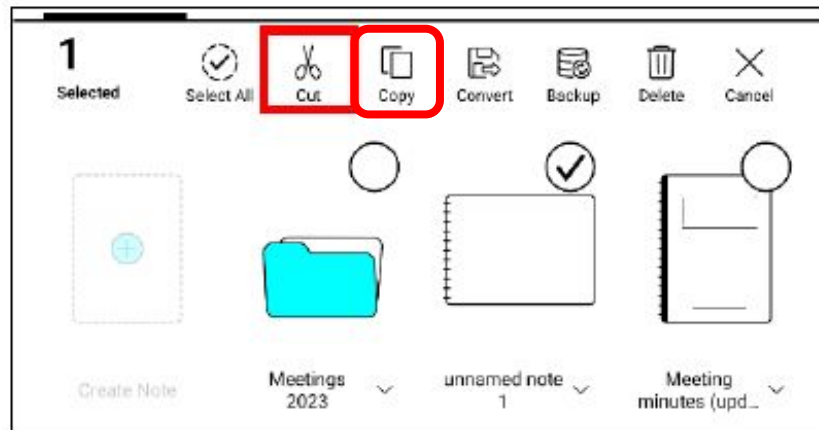

剪下/複製、移動並貼上

  - iii. Open the newly created folder and tap **Paste**.

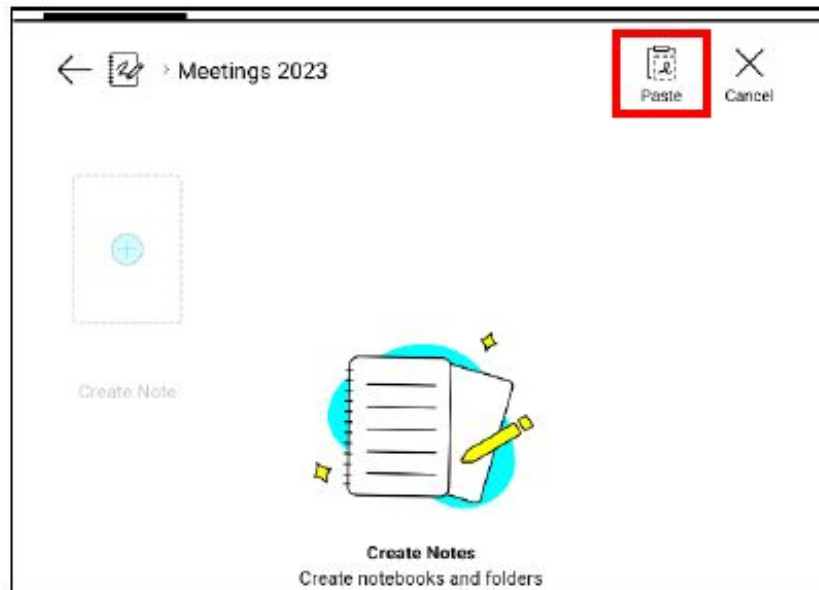

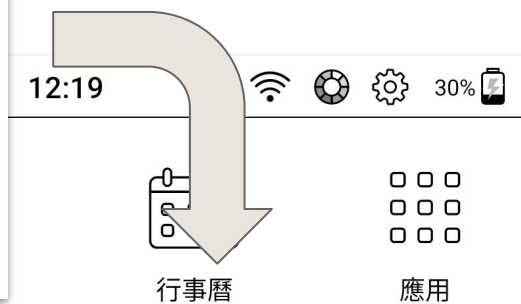


將筆記本轉存成 pdf 檔






 將筆記本製成備份檔

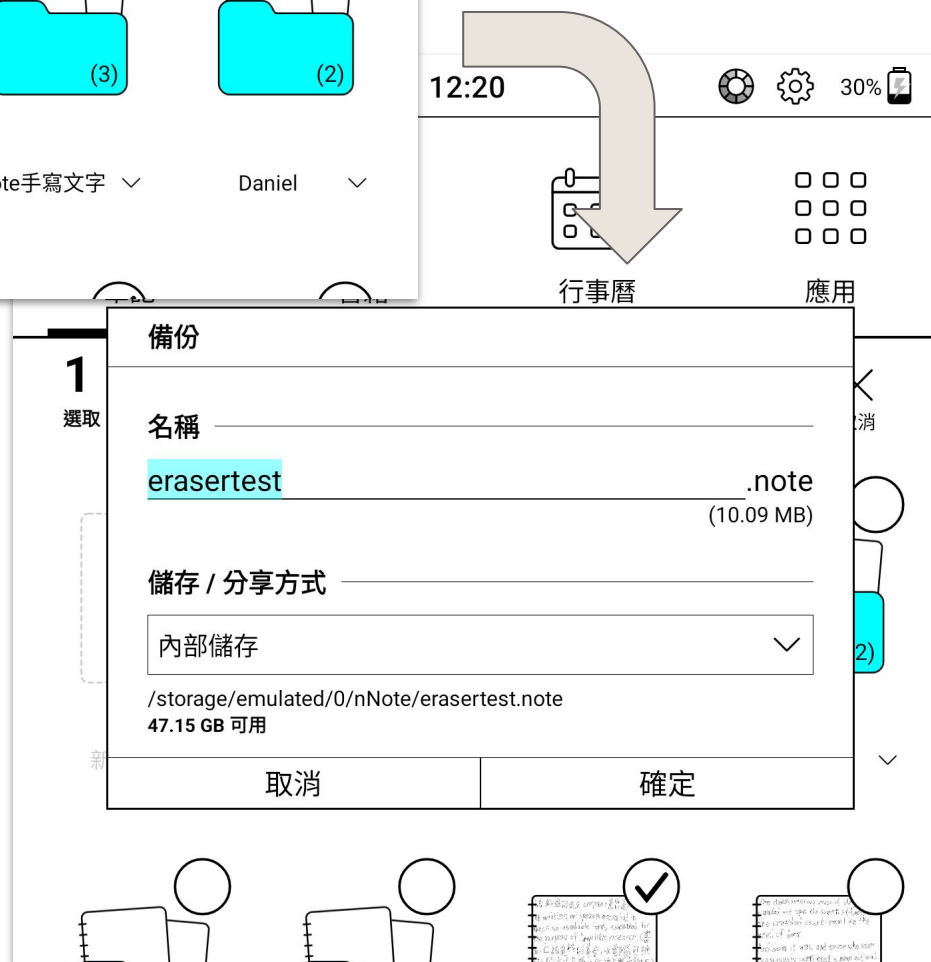

 - **Delete:** Delete the selected item(s). You can undo deletion within a few seconds by tapping on **Recover** on the bottom of the screen.




刪除所選的項目後，幾秒鐘內可點擊螢幕底部顯示「復原」彈窗以恢復刪除檔案

Note: To restore the deleted file, tap  > Deleted Files.



 也可至選單中 > 「刪除的文件」將已刪除的檔案復原或徹底移除



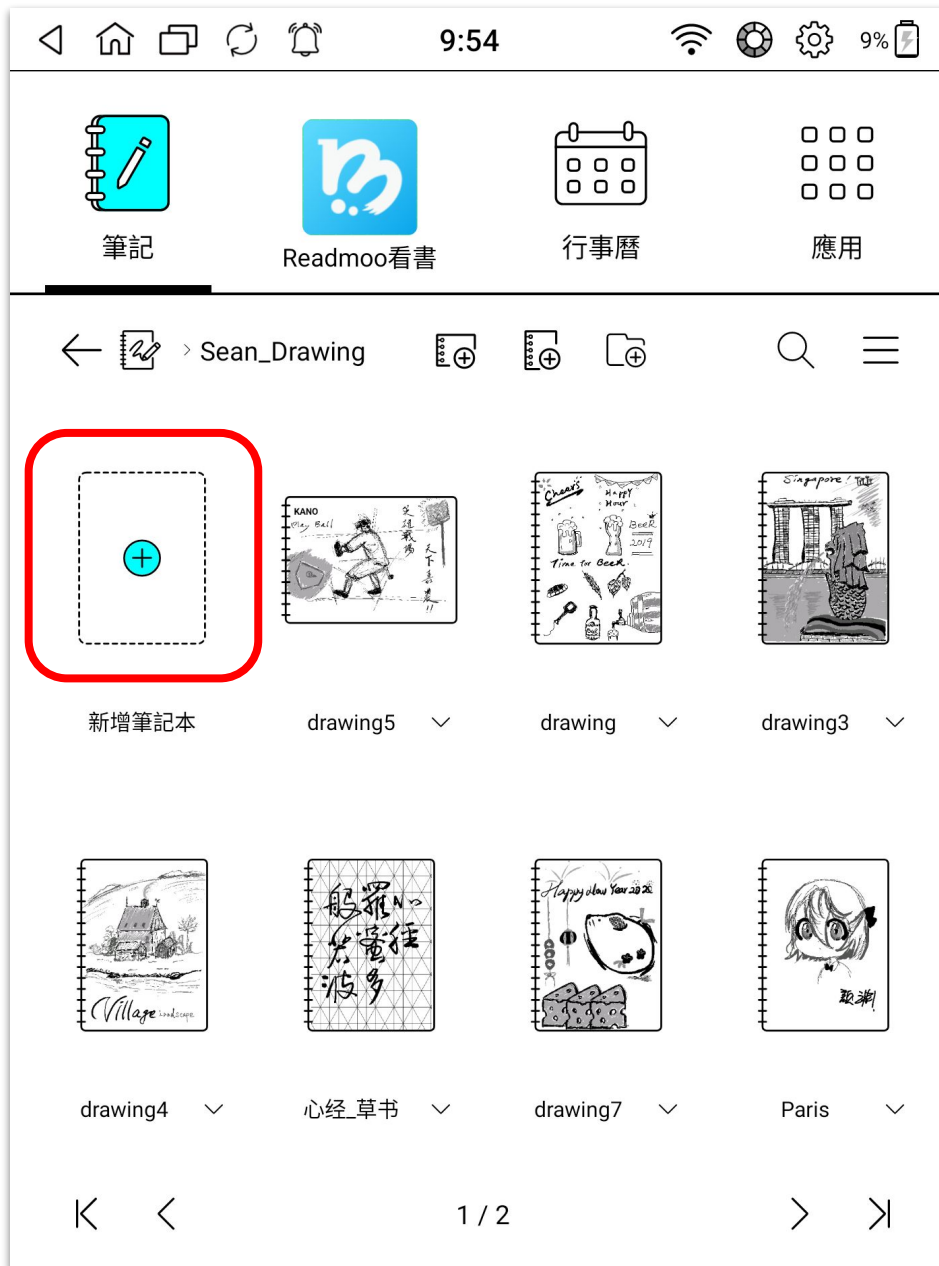

創建新筆記本(完整模式)

 
2. In the Cover section, select the background image for the cover page among **All**, **Default**, and **Custom** options.

Note: If you do not want to add a cover page to your notes, please skip to step 3 or tap directly on the **Notes** shortcut or **All Notes** on the Home screen. Next tap  to open a note page in landscape or tap  to open it in the portrait mode.



建立新的笔记本 > 选择笔记本封面样式

3. In the Page section, select the background pattern or image for the note pages among **All**, **Default**, **Other**, and **Custom** options.

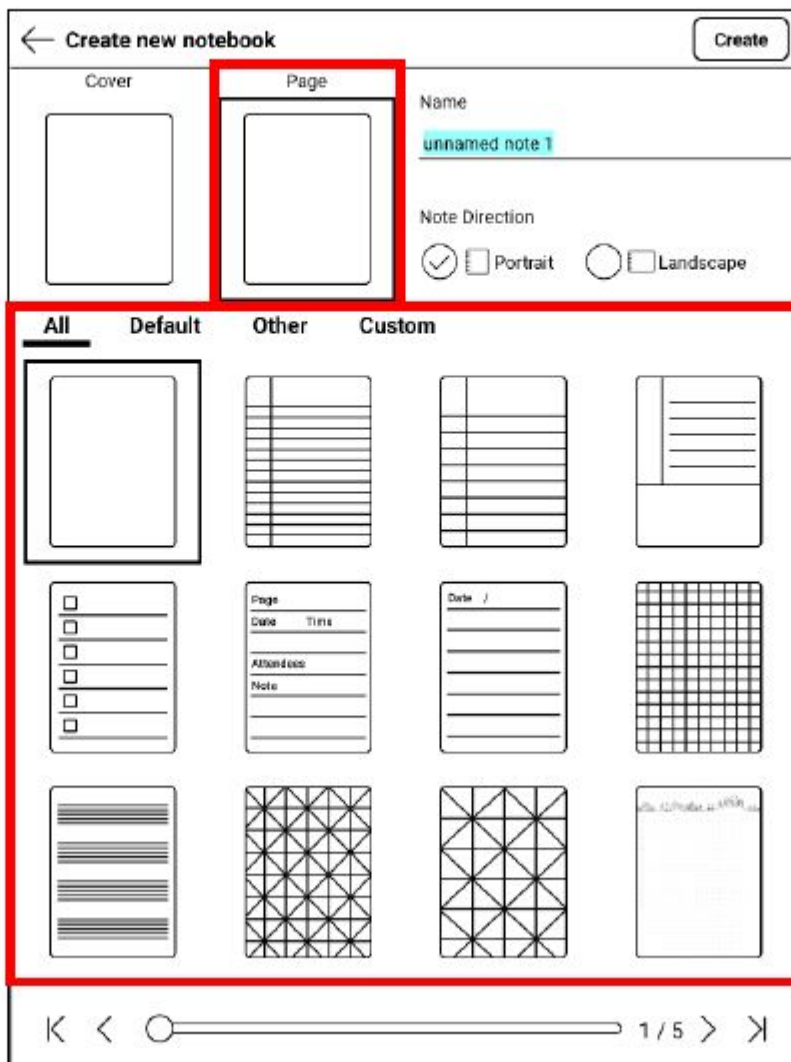

← Create new notebook Create

Cover Page

Name
unnamed note 1

Note Direction
☒ Portrait ☐ Landscape

All Default Other Custom

 
Grid of 12 page templates:

- Blank page
- Lined paper (horizontal lines)
- Lined paper (vertical lines)
- Lined paper (diagonal lines)
- Grid paper (small squares)
- Grid paper (large squares)
- Grid paper (medium squares)
- Grid paper (large squares with diagonal lines)
- Grid paper (small squares with diagonal lines)
- Grid paper (medium squares with diagonal lines)
- Grid paper (large squares with diagonal lines)
- Grid paper (small squares with diagonal lines)


K < ○ 1 / 5 > >

建立新的筆記本 > 選擇筆記本內頁

Note: To add a customized note page, tap **Custom**. Next tap  and select your preferred image from the gallery.

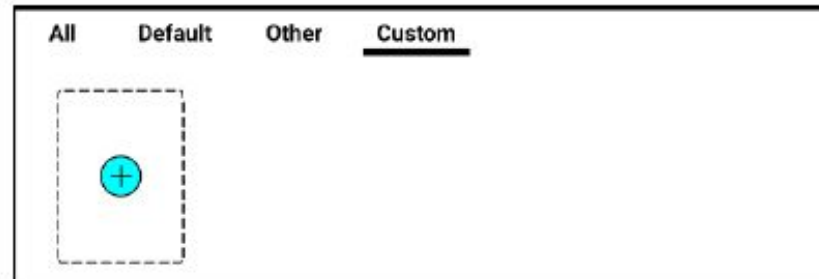

 4. Tap on the Name field and give a name to your notebook.

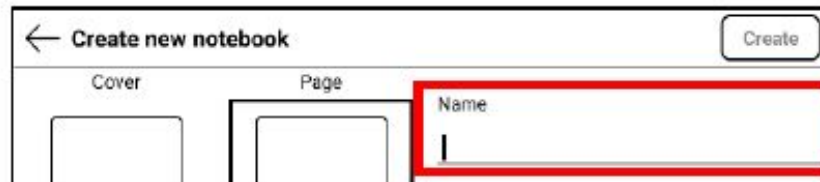


← Create new notebook Create

Cover Page

Name

編輯筆記本名稱

 5. Select the note direction, either **Portrait** or **Landscape**.

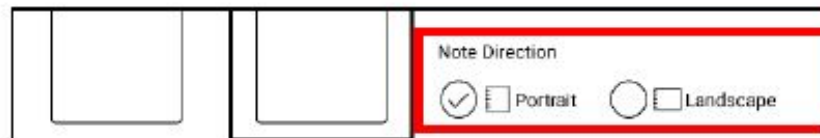


Cover Page

Note Direction


☒ Portrait ☐ Landscape

選擇 直式/橫式 筆記本

 To close the note page, tap ✕. Your work is saved automatically.

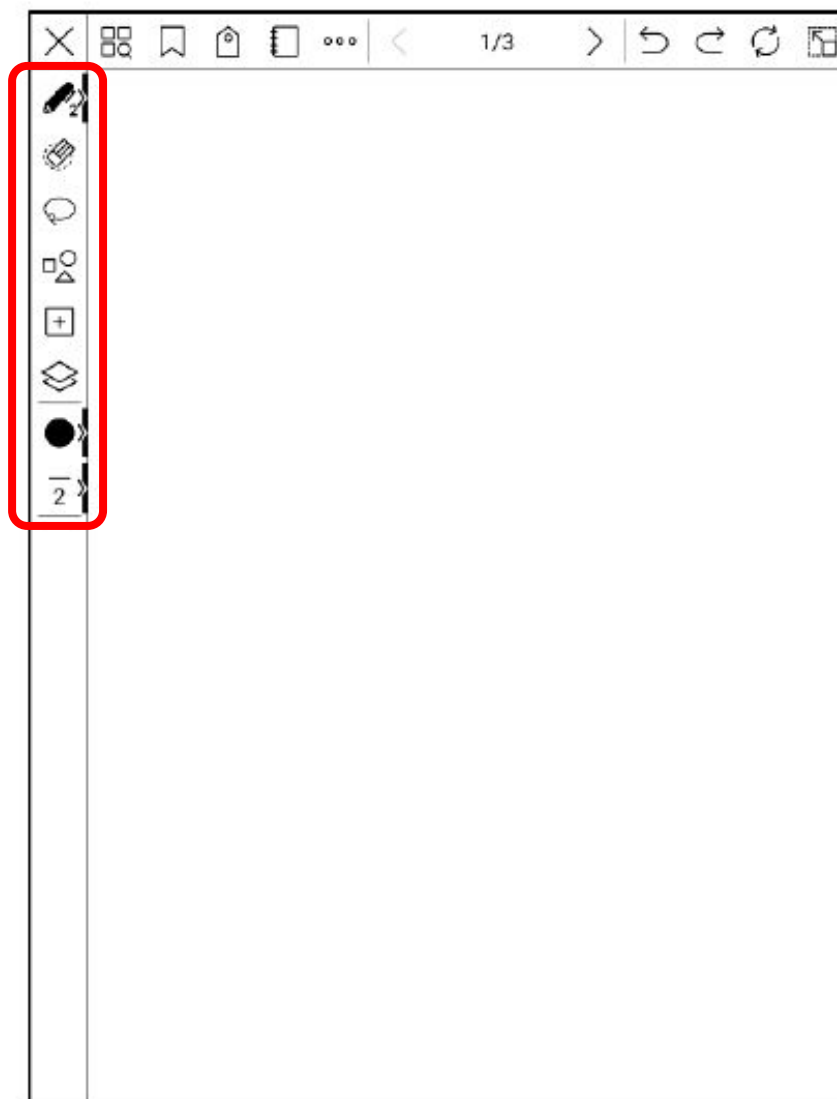


 - : Select the pen type and enter the writing mode. The available options include **Ballpoint Pen** () , **Pencil** () , **Mechanical Pencil** () , **Fountain Pen** () , **Brush** () , and **Highlighter** () .

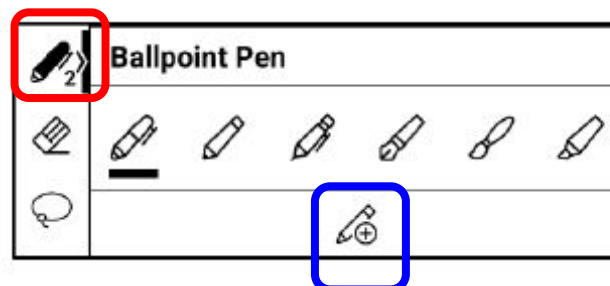

支援 6 種筆觸 依序為
原字筆、素描筆、自動鉛筆、鋼
筆、毛筆、螢光筆

 
Next tap on  in the vertical menu and select the pen thickness from 2 to 15.

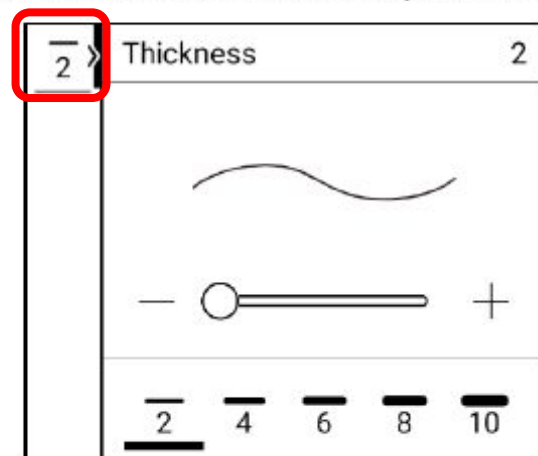

選擇筆觸粗細

Finally tap  in the vertical menu and select the pen color (optional).

 選擇筆觸顏色

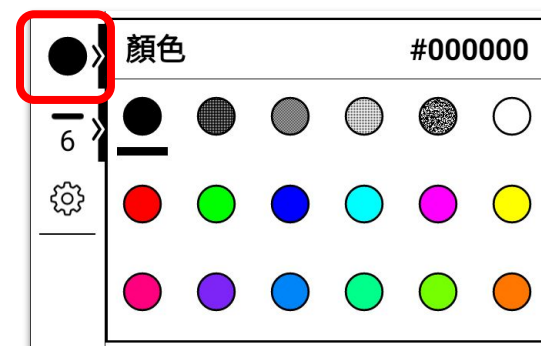

To create a new pen, tap . Then select your preferred pen type, thickness, and color. Tap **Create** to save the settings or **Cancel** to discard the settings.

創建新筆

鋼筆



粗細

6



—

+

顏色





 


取消

創建


最多可新增自定義3 隻筆

- : Select the eraser type. The available options include **Stroke eraser** () for erasing strokes, **Lasso eraser** () for erasing the selected area, **Eraser by size** () , Eraser that clears the current page () .

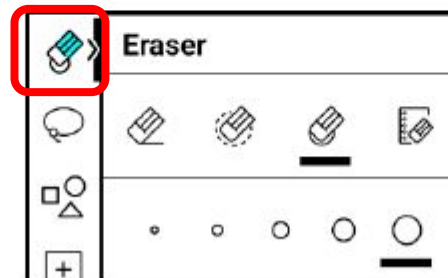


橡皮擦工具支援 4 種方式：
筆劃、套索、部分、整頁

 - : Select an area on the page and perform various actions. After selecting the area, tap / to copy/paste it, tap  to automatically detect the object (not available for text), tap  to cut it, tap  to recognize the handwritten text and insert or replace the current text (not available for objects), tap  to directly replace the handwritten text with the recognized text (not available for objects), tap  to delete the selected area. Tap  to rotate the selected area.

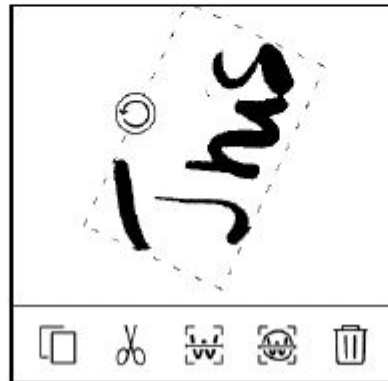


套索工具：除了可以旋轉筆劃之外，依序為複製、剪下、手寫辨識(純文字、圖形及文字)、刪除

- : Add geographical shapes to your note. Select the shape among **Rectangle** () , **Ellipse** () , **Triangle** () , and **Line** () . Draw the shape on the page and then tap  to ungroup the shape's boundary points and modify each point individually, tap  to select the line color, tap  to change the line thickness, or tap  to delete the shape.

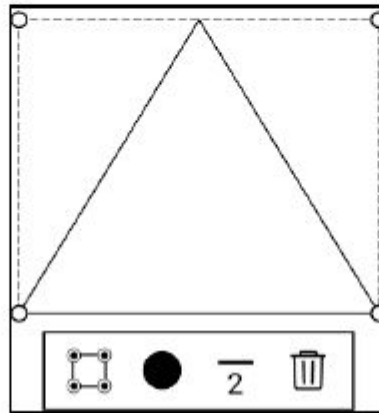

圖形工具：正方形、圓形、三角形、直線

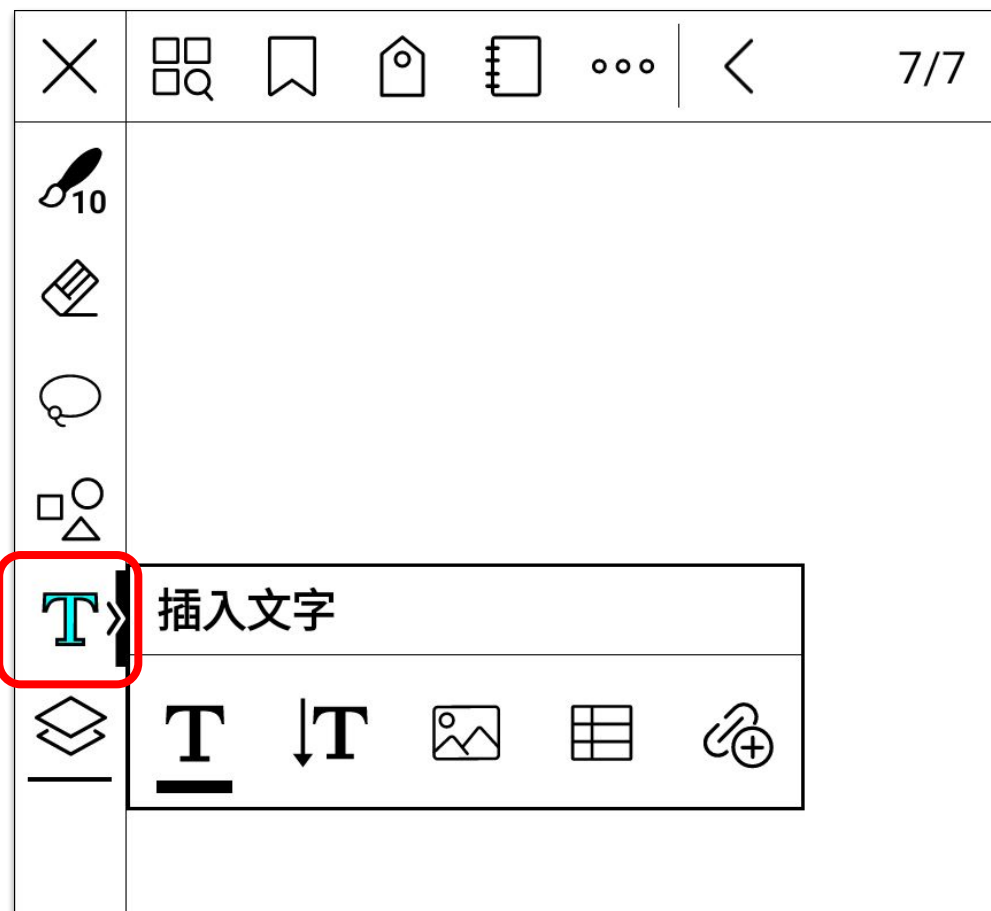


插入工具 依序為：

文字方塊、文字方塊(直排)、圖片

表格、超連結(連結至其他筆記頁面)


- : Add layers to your note. Layer 1 is the current note's page. Tap  to add another layer. Tap  to add a template to the Layer 1 or to the new layer.

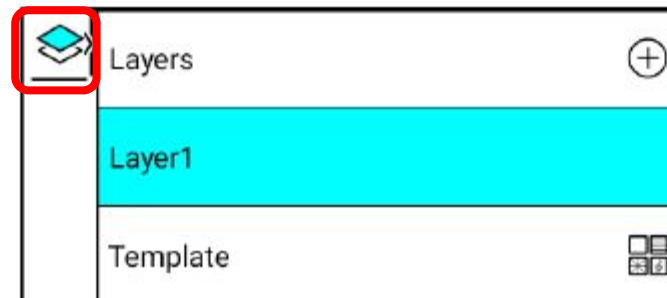

圖層工具 (包含背景設定)

每頁最多可擁有 5 個圖層


After the new layer(s) are added, tap / to move the selected layer up/down respectively, tap  to merge the layers (when prompted to confirm merging, tap **OK**), tap  to hide the layer, tap  to unhide the layer, or tap  to delete the layer (when prompted to confirm deletion, tap **OK**).

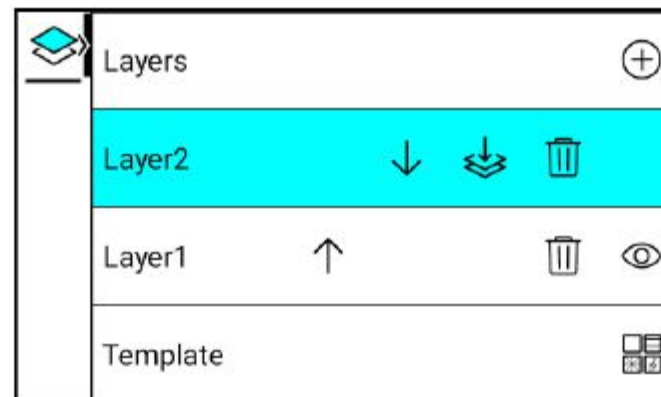

圖層控制：

上下移動圖層、圖層向下合併
刪圖該圖層、屏蔽該圖層

To close the note page, tap X. Your work is saved automatically.

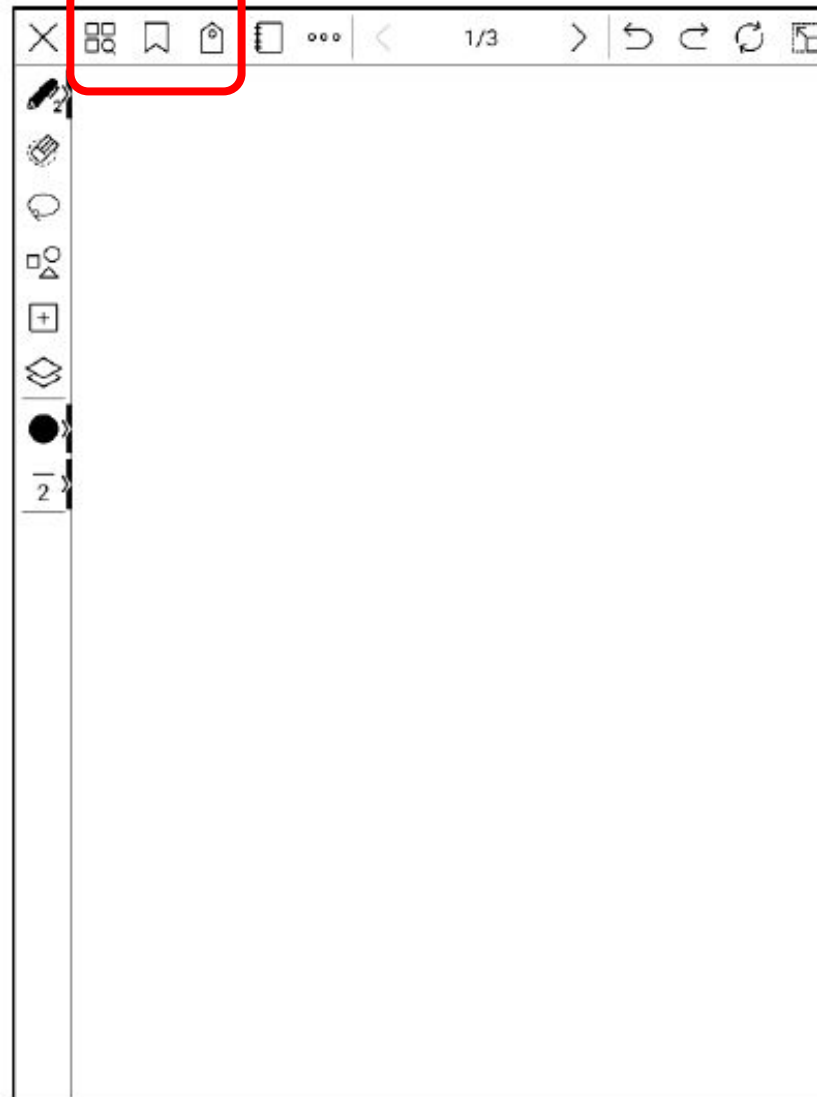

縮圖模式：包含搜尋筆記內頁


快速頁籤(方便搜尋用)

自訂標籤(方便搜尋用)

○ **Search:**

- i. Tap on the **Thumbnails** tab to search for handwritten text on any of the current note pages or tap on the **Bookmark** tab to search for bookmarks on any of the note pages.

Note: Pages that include bookmark(s) are marked with the  icon.

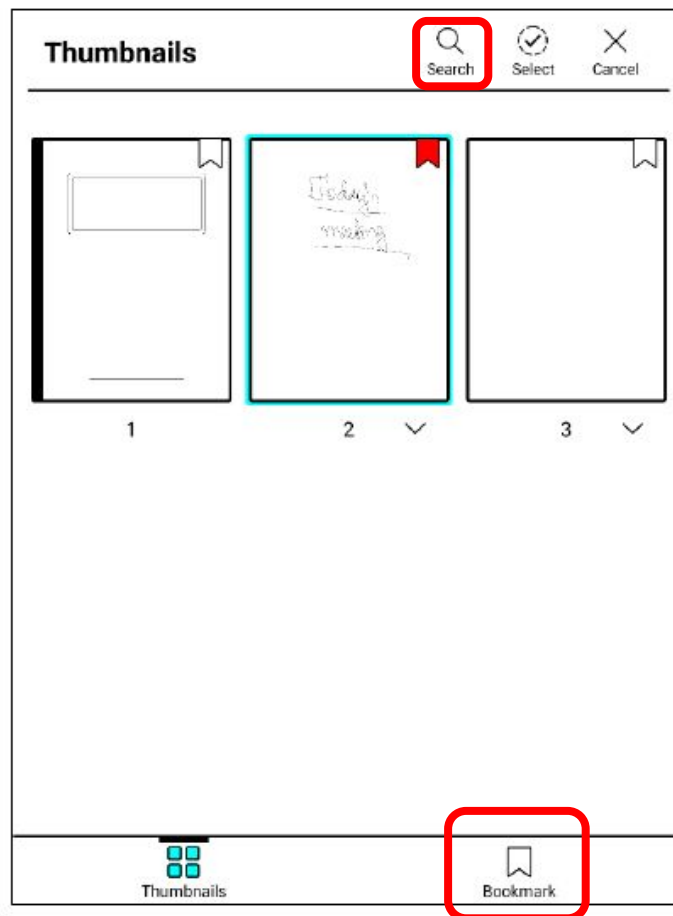

縮圖模式：

搜尋功能包含手寫辨識及自訂標籤

頁籤選項可快速篩選出已被標記頁籤之頁面

- ii. Tap **Search**, enter the search word and tap .

Note: If you need to change the OCR language for the search, tap  and select your preferred language.



縮圖模式：

搜尋功能包含手寫辨識及自訂標籤

Recognition (OCR) language, for example English (United States) (by default). In this menu, you can change your handwritten text recognition language.

Tap **Other language** and next select the language from the list. The language will be downloaded to your Electronic Notebook.


Note: *Make sure your Electronic Notebook is connected to the Internet if you want to change the OCR language.*



手寫辨識支援多國語言，預設為英文

可透過「更多語言」選單下載繁體中文

iii. Tap **Select** and then select the note page(s) you want to **Move**, **Copy**, or **Delete**.

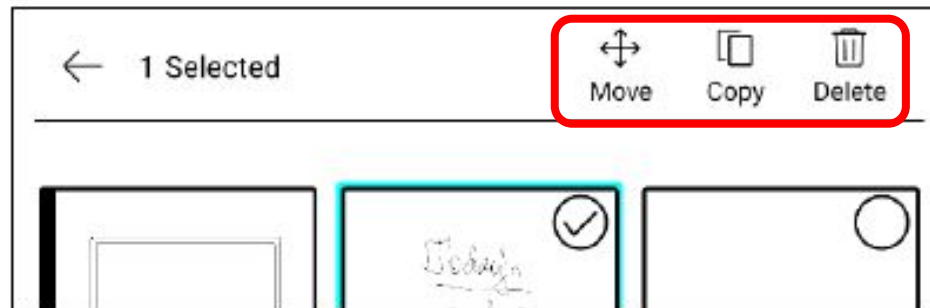

縮圖模式：


選取功能可以移動頁面

If you want to move or copy the page, then tap on the column next to the page you want to move it or copy as shown below:





筆記頁控制項

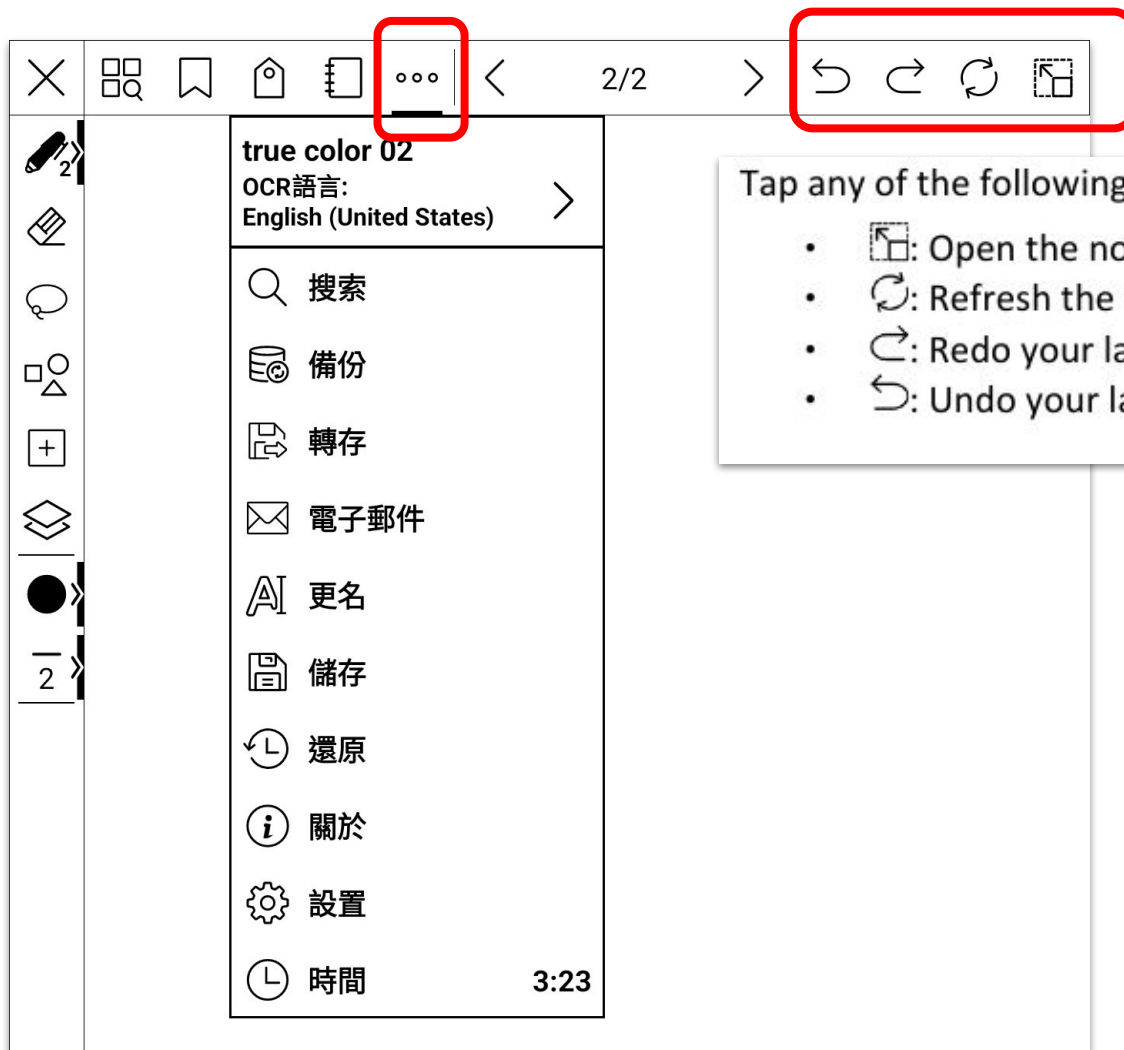

Tap any of the following icons:

- : Open the note page in full screen (hide the menus) 全螢幕
- : Refresh the note page. 刷新畫面以清除殘影
- : Redo your last action. 重做最後一個動作
- : Undo your last action. 撤銷最後一個動作

備份

名稱

erasertest.note
(10.02 MB)

儲存 / 分享方式

內部儲存



/storage/emulated/0/nNote/erasertest.note

47.22 GB 可用

取消

確定

將筆記本製成備份檔

轉存

名稱

erasertest

格式



PDF



PNG

 
範圍



目前的頁面



整本筆記本



所選頁面

儲存 / 分享方式

內部儲存



/storage/emulated/0/Books/erasertest.pdf

47.22 GB 可用

取消

確定

將筆記本轉存成 pdf 檔

或是指定頁面轉存成 png 檔

電子郵件

收件者

最近聯絡人

輸入郵件地址

新增

主旨

erasertest

erasertest.pdf

+ 新增訊息

上一步

傳送

將筆記本轉存成 pdf 檔

並透過電子郵件直接寄出至指定Email

還原

內部儲存

▼

erasertest.note

2023.09.21 16:29:39

6.96 MB

🕒

📅

Az

🔍

1 / 1

▼

取消

將列出日前已製作備份之清單讓使用者
選擇後可還原至該時間點筆記內容

關於

筆記本名稱	erasertest
筆記本大小	10.09 MB
建立時間	2023/06/05 09:48:14
最近編輯	2023/10/11 10:27:12

關閉

顯示該筆記之詳細資訊

設置

佈局



翻轉



校準

水平方向： 置中 ✓

垂直方向： 置中 ✓

 手寫筆校正

畫面刷新

每 6 頁

1

3

6

10

20

30

50



關閉

 
筆記相關設置：

 
1. 左撇子 / 右撇子 切換

2. 手寫筆校正

3. 畫面全刷清楚殘影選項

系統設定

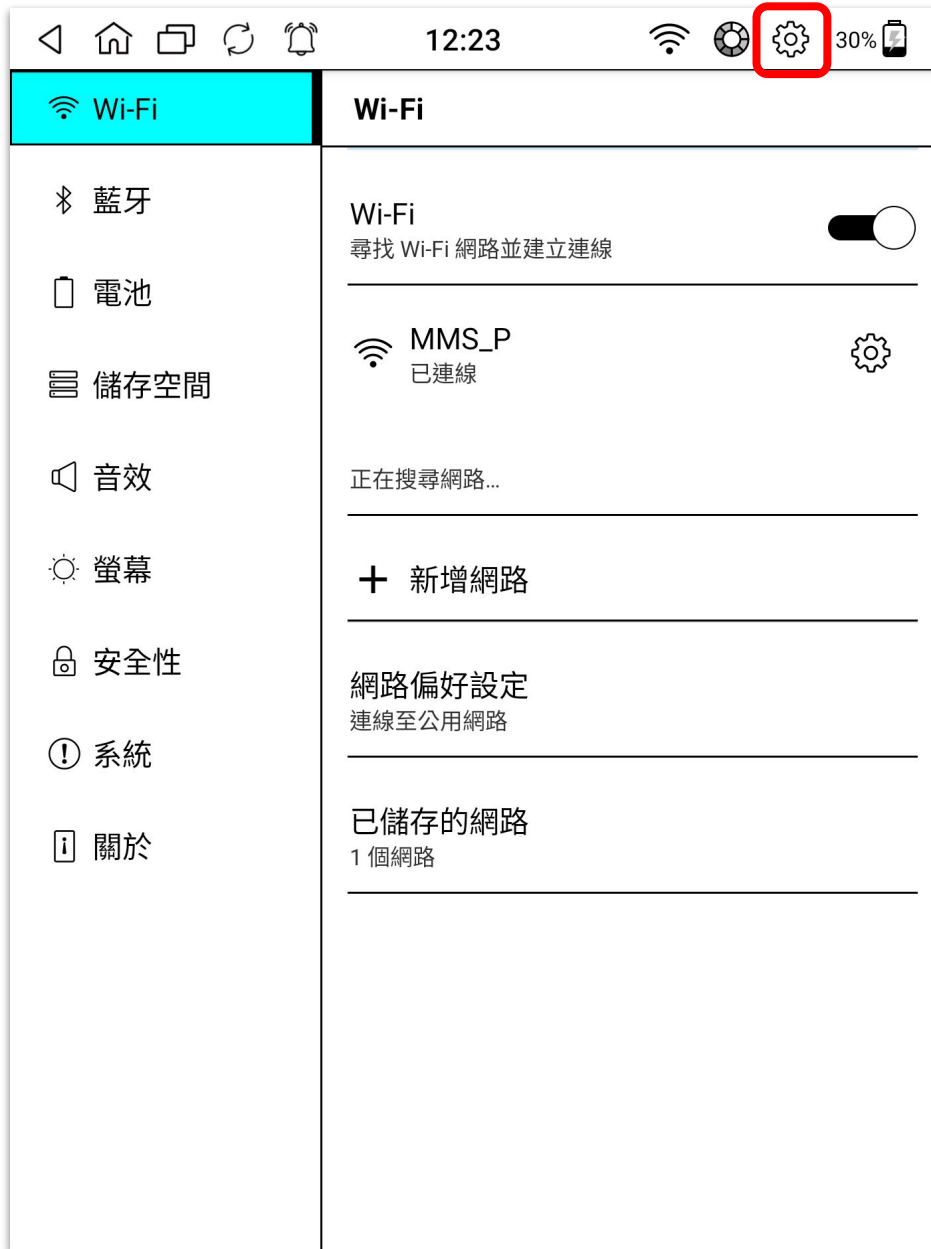

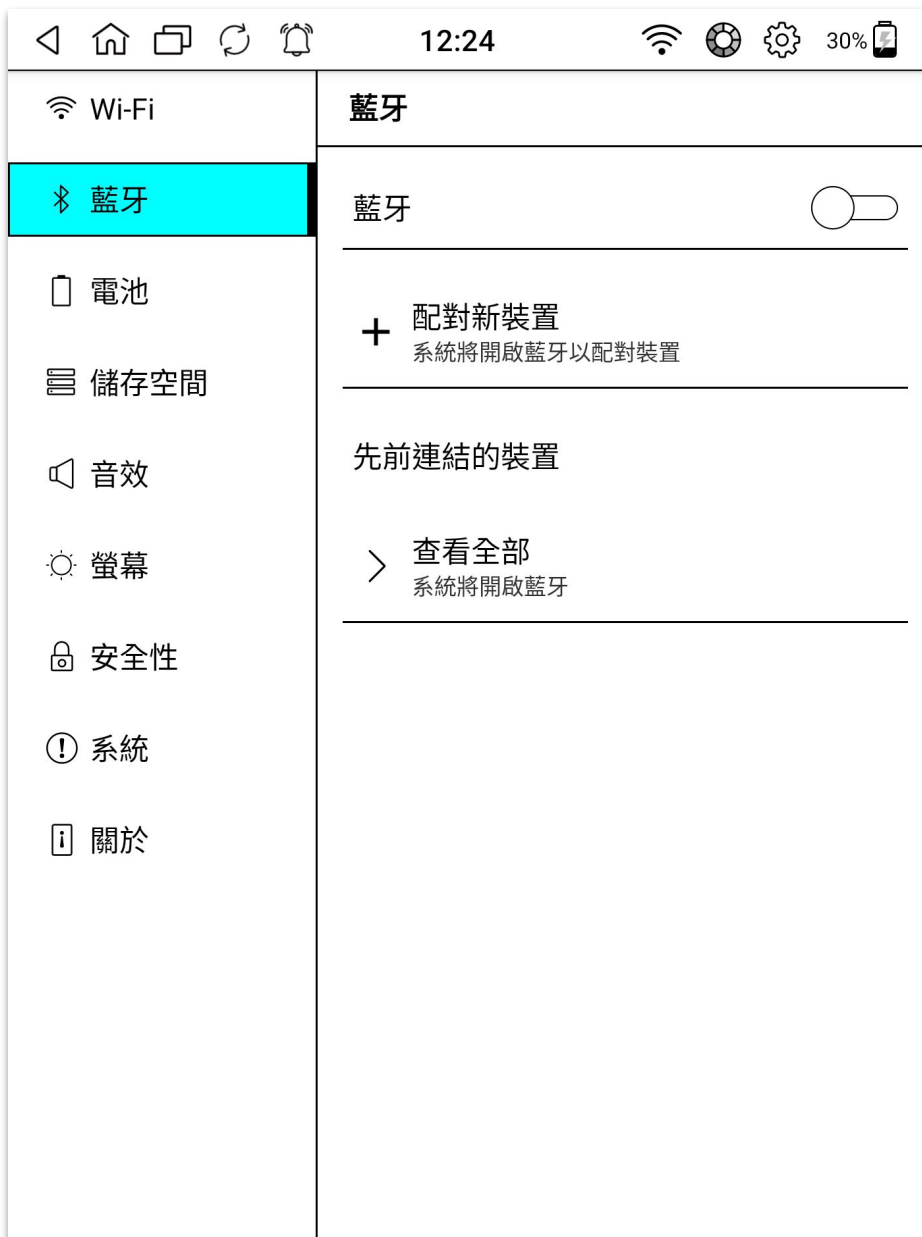

Wi-Fi

藍牙

電池

儲存空間

音效

螢幕

 
安全性

系統

關於

電池

30%



充電中 • 7 小時 25 分鐘後充飽

電池用量

查看最近一次充飽電後的使用情形

電量百分比

在狀態列中顯示電量百分比





12:25



Wi-Fi

藍牙

電池

儲存空間

音效

螢幕

 
安全性

系統


關於

儲存空間

已使用 **13** GB 共 64 GB




系統 8.9 GB

 


應用程式 3.3 GB



 
文件及其他內容 1.0 GB



圖片 171 MB

 

垃圾桶 0 B

 


遊戲 0 B




音訊 0 B



  影片 0 B



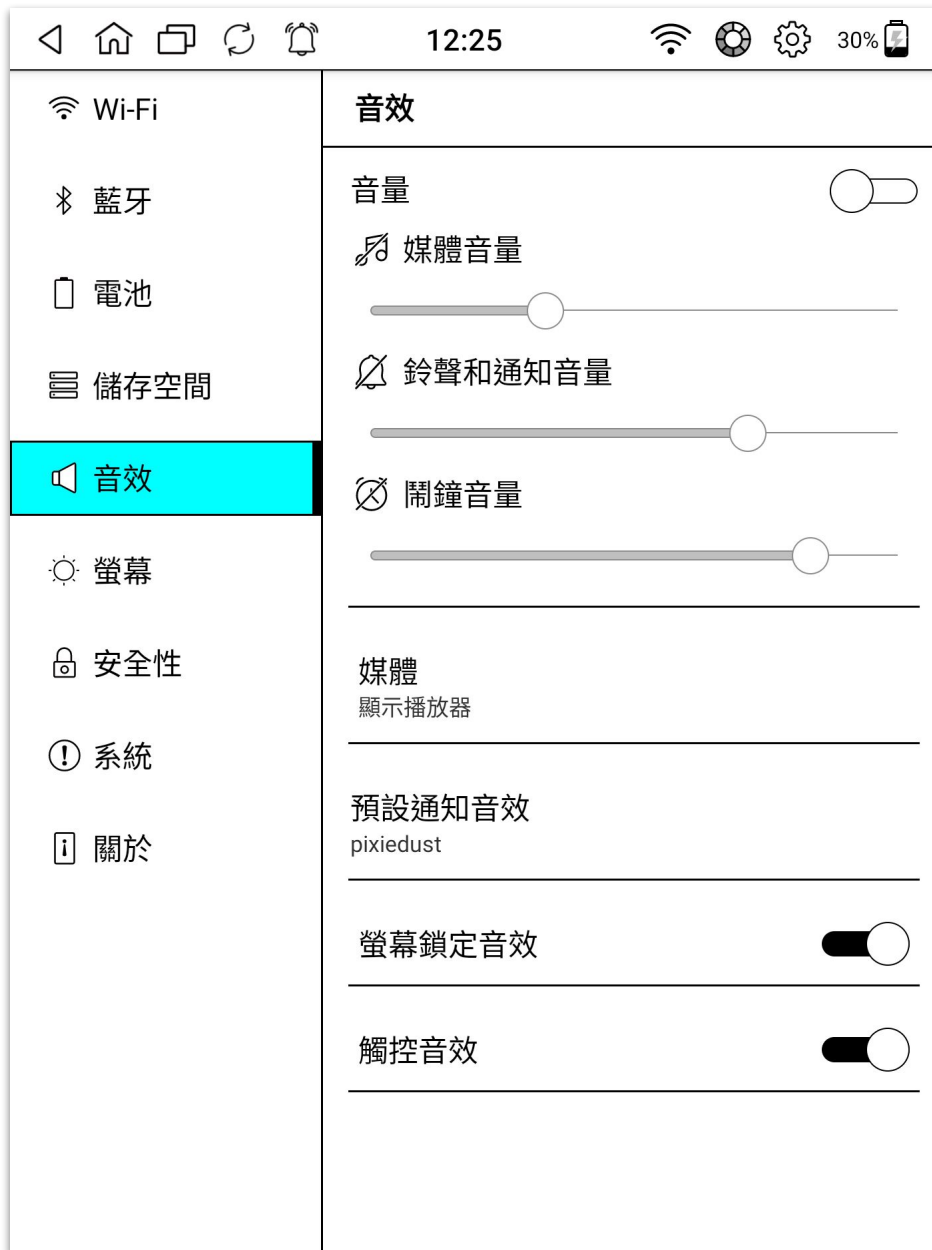

Wi-Fi

藍牙

電池

儲存空間

音效

螢幕

安全性

系統

關於

螢幕

前光

 


亮度




顏色

對比度



淺色過濾

 

保護套休眠喚醒功能

 


 
螢幕自動關閉

閒置 5 分鐘後

睡眠畫面

睡眠圖片

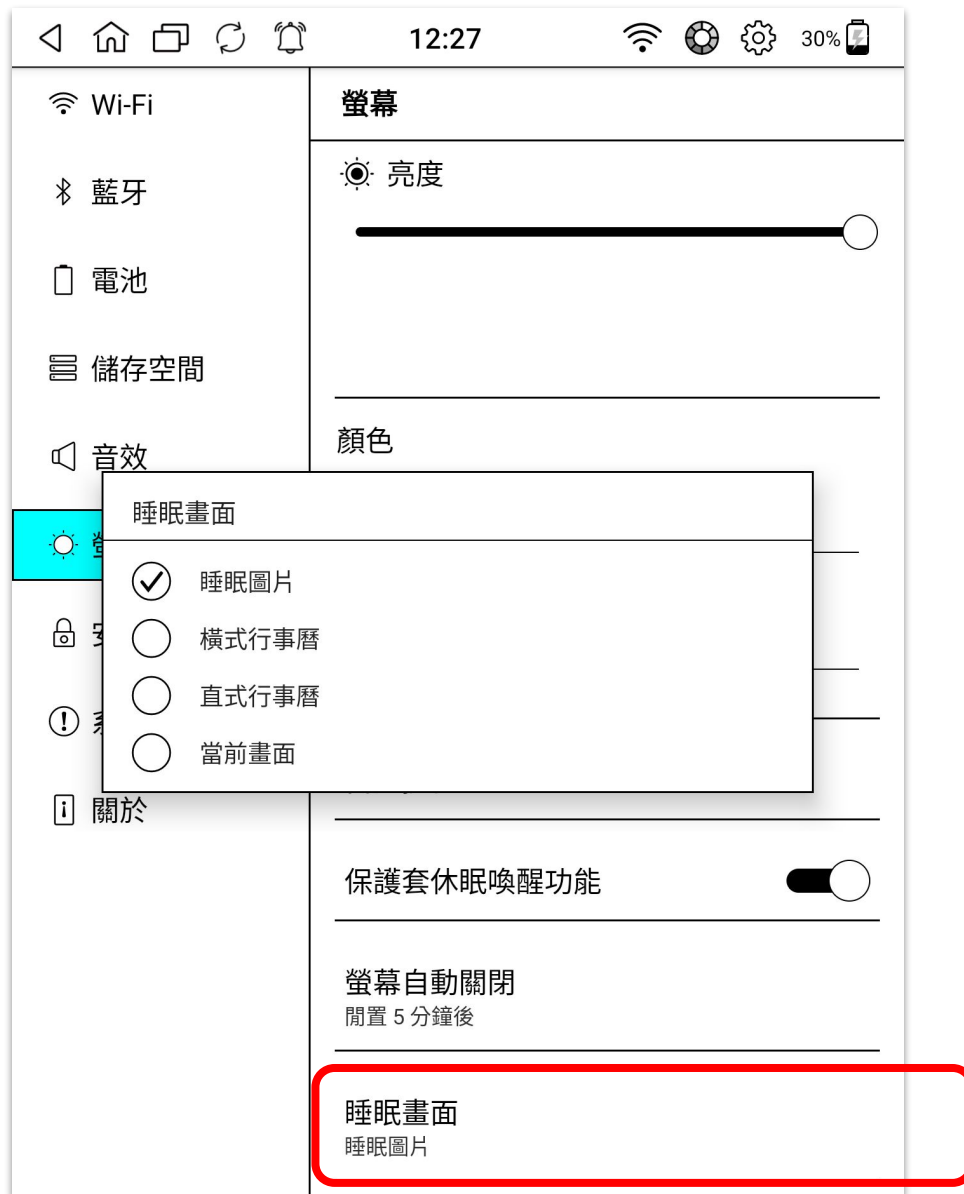

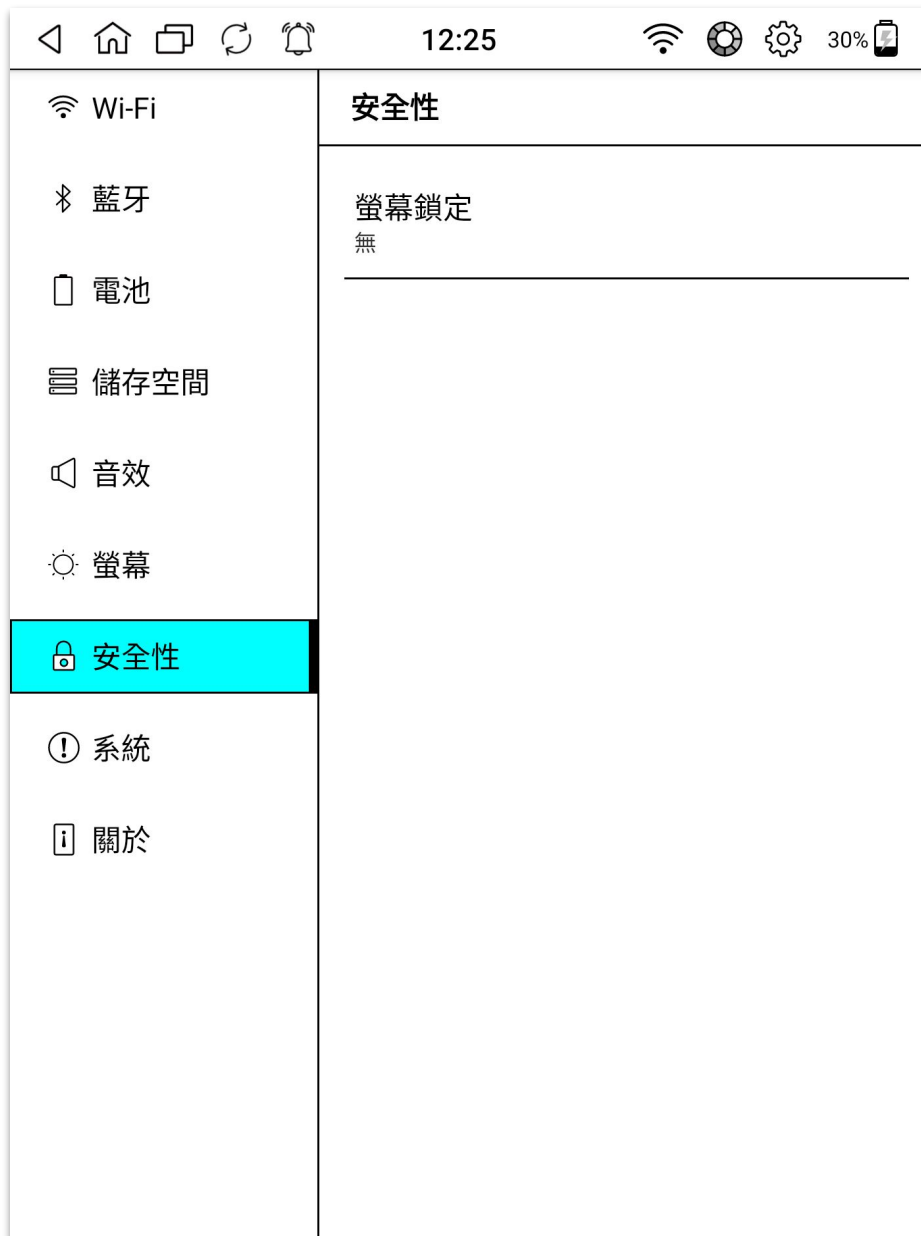

Wi-Fi

藍牙

電池

儲存空間

音效

螢幕

安全性

ⓘ 系統

ⓘ 關於

系統

語言與輸入設定

日期和時間
GMT+08:00 台北標準時間

系統更新

開發人員選項

重設選項

Wi-Fi

藍牙

電池

儲存空間

音效

螢幕

安全性

⚠ 系統

i 關於

← 重設選項

重設 Wi-Fi、行動網路和藍牙

清除所有資料 (恢復原廠設定)

Wi-Fi

藍牙

電池

儲存空間

音效

螢幕

安全性

系統

關於

關於

法律資訊

型號
WAVE

 
Android 版本
12

狀態
網路狀態及其他資訊

版本號碼
DANIEL_BUILD_NUMBER_FROM_FILE_userdebug

關於MobiScribe
WAVE

補充說明

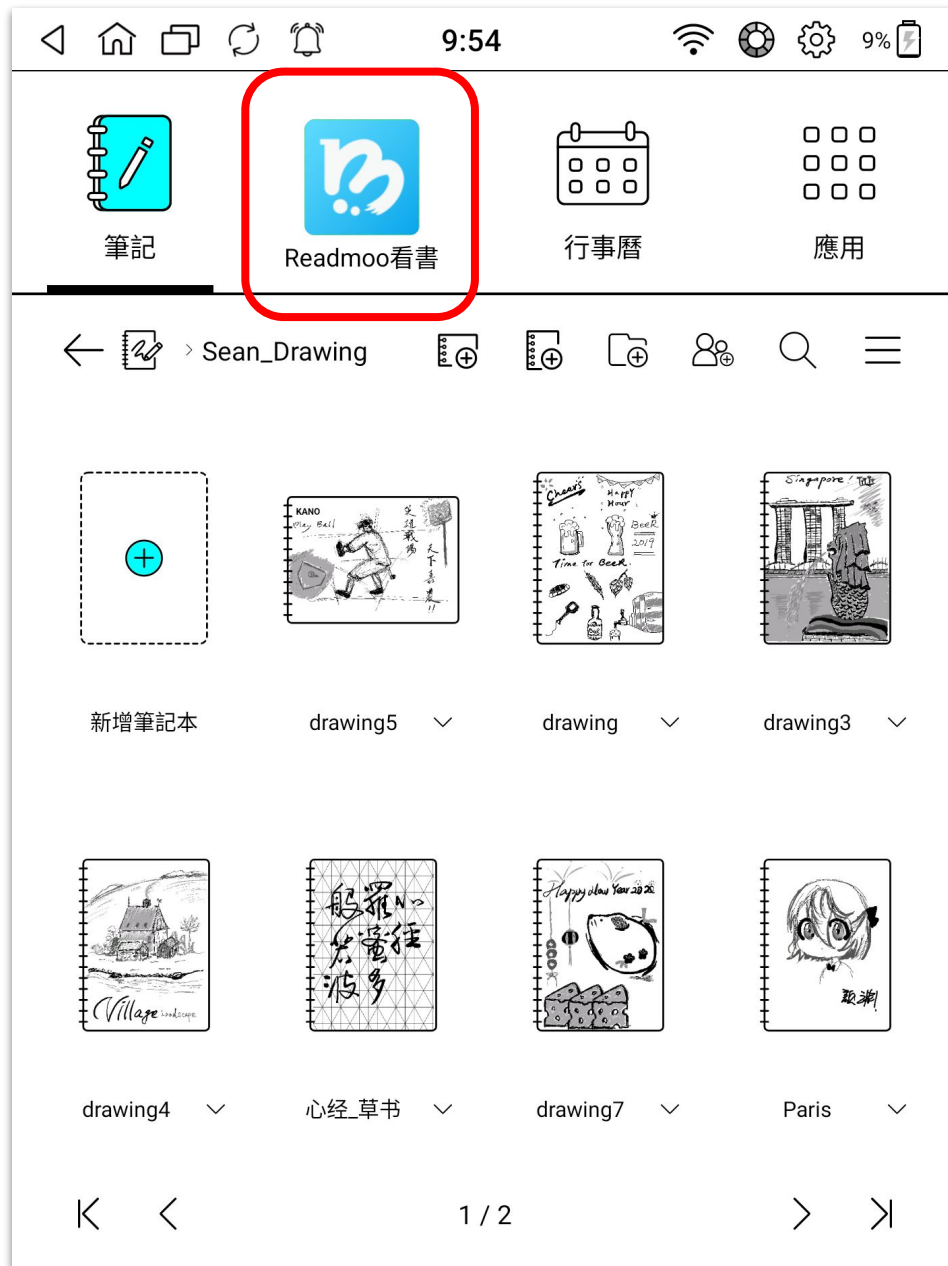

Readmoo 看書 app 在閱讀模式時,

1. 系統內建「單點翻頁」會自動6頁刷新

參考影片：

<https://youtube.com/shorts/vq8BguldXWk>

2. 「滑動翻頁」也可點擊狀態列刷新鍵清除殘影

參考影片：

<https://youtube.com/shorts/3vAMHPXMqZ8>

THE END
THE END